



## User Manual

---



**ARENDO MILKSKY**

Mod.-Nr.: 303090, 303091, 303092

## Table of content

1. Scope of supply .....	<b>3</b>
2. Important safety guidelines.....	<b>3</b>
3. Before you start .....	<b>6</b>
4. Product details.....	<b>6</b>
5. Usage.....	<b>8</b>
6. Tips and Tricks .....	<b>10</b>
7. Serving suggestions .....	<b>11</b>
8. Cleaning and care .....	<b>11</b>
9. Technical data .....	<b>12</b>
10. Safety instructions and liability disclaimer .....	<b>13</b>
11. Disposal instructions .....	<b>13</b>

Thank you for choosing this product from Arendo and for placing your trust in our company. Please read this manual carefully to ensure your long-term enjoyment of this product. For future reference, please keep this manual.

## 1 Scope of supply

- milk frother
- Baseplate with connection cable
- User manual



## 2 Important safety guidelines

- Read all instructions carefully in this user manual before using the unit!
- Devices can be used by persons with reduced physical, sensory or mental abilities or lack of experience and knowledge if they are under supervision or receive instruction concerning use of the appliance safely and understand the hazards involved.
- **WARNING:** This equipment must be grounded.
- Do not immerse in water or other liquids, posing a risk of short circuits!
- Do not pour liquid on the plug!
- Never operate damaged equipment.
- Do not place the device on a polished wood surface, as this could damage the wood.
- Never touch live parts.
- Connect the device only to a professionally installed socket with the correct voltage.
- Do not use extension cords.
- Never leave the main cable loosely hanging, do not remove the plug with wet hands, never lay or attach the cable and the plug near hot surfaces and never let plugs and cables come into contact with oils.
- Unplug the appliance from the socket after each use and if the device is not in use, before changing accessories or cleaning the unit.
- Do not touch the metal parts, the filter holder and its case when

the unit is in operation or has recently been in use, as this may cause burns or scalding and the heating surface has to cool down after some time of use, due to residual heat.

 
- Do not use this appliance with a damaged cable or plug. If the power cable is damaged, it must be replaced by the manufacturer, its service agent or a similarly qualified person in order to avoid hazards.
- This device is designed for household use and similar applications only, such as for example:
  - in employee cafeterias, in stores, offices and other working environments;
  - by customers in hotels, motels and other residential facilities;
  - in Bed and Breakfast establishments;
  - in farm houses."
- Children should be supervised to ensure that they do not play with the milk frother.
- Do not operate outdoors.
- Do not operate without milk in the container.
- Turn off the unit and the main power when it is not in use.
- Never touch rotating parts. Danger of injury!
- By exceeding the capacity of the jug, it may overflow
- Device only in conjunction with the supplied base unit.
- Never operate device on uneven surfaces.
- Use only fire blankets to extinguish fires on appliances.
- The device is not designed for commercial or industrial purposes. It is only suitable for domestic use.
- Do not insert any objects and / or fingers in the opening.
- Turn off appliances prior to disposal, disconnect the power cable and dispose of the appliance at an official landfill.
- This device can be used by children above 8 years, if they have understood existing, haveing been supervised or instructed instruction concerning the use of the appliance in a safe manner. Cleaning and maintenance should not be done by children, unless they are supervised. Keep the appliance and the cable out of the reach of children aged less than 8 years.
- Never immerse the cable or plug in water or any other liquid to protect from fire, electric shock and injury to persons.

 
- A supervision is necessary when the device is used by children or used in the vicinity of children.
- Unplug the device from socket before cleaning or when the device is not in use
- Never operate the device with a damaged cable or plug, after a defect or with any damage. Pass on the device for checking, repair or adjustment to the nearest authorized dealer.
- The use of accessories, which are not recommended by the manufacturer may cause fire, electric shock or injury
- Do not let the cable hang over the edge of a table or a counter or let it touch hot surfaces.
- Do not place on or near a hot gas or electrical furnace or in a heated oven.
- At first, insert the plug into the device and then the cable into the outlet. Turn off the device before pulling it out of the socket.
- Do not use the device for anything other than for the intended purpose applications provided to prevent possible injury
- Scalding may occur if the lid is removed during the operation.
- Hold the milk frother only on the handle!
- Keep for future use these instructions carefully!

### 3 Before you start

- Unpack the carton with care and keep all the packing materials until you ensure that the product is complete and working properly.
- Remove all packaging materials and plastics and preserve this booklet for possible future use. Make sure that the delivery scope is complete.
- Clean the container and the accessories as described before the first use of the device as described in the chapter "Cleaning and Care", to remove dust or production residues.

 
 
### 4 Product details

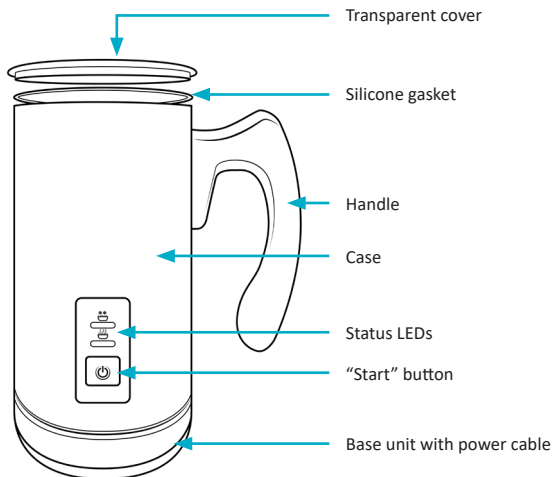

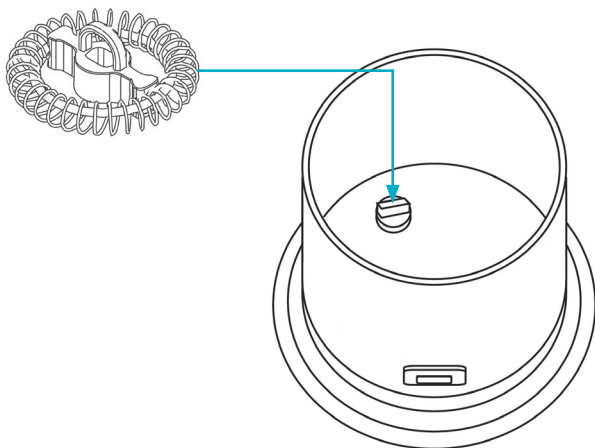
 


## Whisk attachments

 
 
Whisk for frothing milk

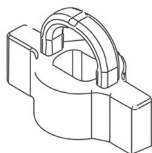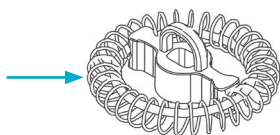

Whisk for heating milk


Whisk	Functions	maximum level	Time for completion
	Frothing cold milk	115ml	~100s
	Frothing and heating	115ml	
	Heating (with only a small amount of foam)	240ml	

## 5 Usage

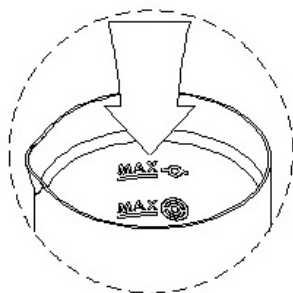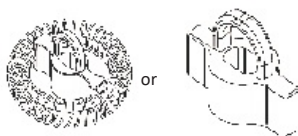


 Select the matching whisk and fasten it in the container (see the above-mentioned functions for reference).



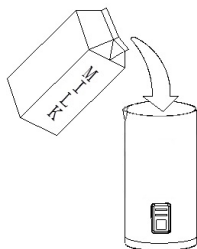

 Only pour as much milk into the container that it is filled to just below the desired mark (see the maximum levels on the previous page as a reference).

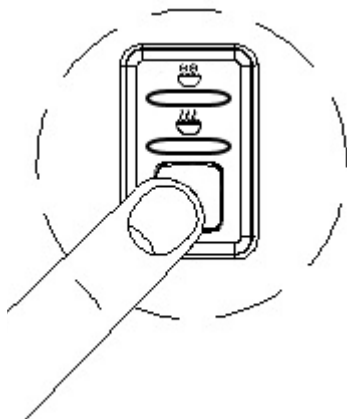

Press the button to turn on the unit:

- Frothing & heating: The LED indicators lights up by pressing the start button once. After completion of the operation, the red indicator light flashes for 30 seconds.
- Cold milk froth: Pour cold milk into the case and press and hold the start button for approximately 3 seconds, whereupon the blue LED indicator lights up. After approximately ~100 seconds, the operation is complete. The blue LED indicator lights off and flashes for 30 seconds.
- Take the milk frother from the base unit and pour in milk. Fill the container only with that much milk, so that at least the minimal (MIN) level is reached. However, do not fill it with too much milk above the maximum marks (MAX). Otherwise the device may overflow.


 
## 6 Tips and Tricks

Here are some useful tips to help you get the most out of your milk frother.

- For an optimum milk foam, only use cold milk. Keep milk in the refrigerator!
- Always use your milk frother first to froth or heat milk. Prepare your coffee or hot chocolate during this time and serve the drink directly after completion.
- Use whole milk (fat rate > 3.0%) for the best results.
- Cold milk can be foamed with this milk frother. But this does not mean that you can cool the milk with the device. The milk frother works in this state at a normal temperature.
- Store the whisk attachments in a safe place. They are small and can easily be lost.
- Allow the device to cool down for two minutes after foaming. Rinsing with water and subsequent drying after each use reduces this time.
- The milk frother is designed to foam milk and to heat. If you add flavours such as coffee or cocoa powder in the milk frother, ensure that the equipment is cleaned immediately after use and thoroughly.

## 7 Serving suggestions

Below you will find a selection of fast and easy drinks that you can heat with the milk frother.

With frothed milk	With hot milk
	
<b>Cappuccino</b> <ul style="list-style-type: none"> <li>• 1/3 Espresso</li> <li>• Add 2/3 frothed milk</li> <li>• Provide cocoa powder on the froth</li> </ul>	<b>Caffè Latte</b> <ul style="list-style-type: none"> <li>• 1/3 Espresso</li> <li>• Add 2/3 hot milk and stir</li> </ul>
<b>Latte Macchiato</b> <ul style="list-style-type: none"> <li>• Fill the frothed milk in a tall glass</li> <li>• Carefully pour espresso along an edge of the glass</li> </ul>	<b>Hot chocolate</b> <ul style="list-style-type: none"> <li>• Fill the hot milk into a large mug</li> <li>• Add cocoa powder and mix milk with the powder by stirring</li> </ul>

## 8 Cleaning and care

Remove the container from the base unit before cleaning. Separate the lid and the silicone seal of the container. Never dip the container or the base unit in water.

The container	Clean immediately after use. Rinse and clean the inside walls with warm washing-up liquid/soapy water and a non-abrasive cloth. Dry the container with a soft cloth. Never allow frothed, heated milk or other unused drinks to stand in the container!
The lid	Separate the lid and the silicone ring of the container. The washing is carried out directly with water.
The housing	Clean the cabinet with a soft cloth. Never use sharp cleaning objects, a hard nylon brush or metal brush scratches on the stainless steel surface in order to avoid scratches. Never clean it with metal objects and with abrasives.
The whisk attachments	Remove the whisk attachments (whisk and beater) from the container and wash them in warm water. Dry off the whisks and store them in a safe place. Do not use a dishwasher.

## 9 Technical data

Power supply	220-240V~ 50-60Hz
Power input	500W



## 10 Safety instructions and liability disclaimer

Never try to open the device to carry out repairs or conversions. Avoid contact with mains voltages. Do not short-circuit the product. The device is not certified for use in the open air; only use it in dry conditions. Protect it from high humidity, water and snow. Keep it away from high temperatures. Do not subject the device to sudden changes in temperature or heavy vibration as this might damage electronic components. Examine the device for damage before using it. The unit should not be used if it has received an impact or has been damaged in any other way. Please observe national regulations and restrictions. Do not use the device for purposes other than those described in the instructions. This product is not a toy. Keep it out of the reach of children or mentally impaired persons. Any repair or alteration to the device not carried out by the original supplier, will invalidate the warranty or guarantee. The product may only be used by persons who have read and understood these instructions. The device specifications may change without any separate prior notice to this effect.

## 11 Disposal instructions

Electrical and electronic devices may only be disposed of in accordance with the European WEEE Directive and not with household rubbish. Components must be disposed of or recycled separately as dangerous, toxic elements can inflict sustained damage on the environment if they are disposed of incorrectly. As a consumer, you are bound by the Electrical and Electronic Devices Act (ElektroG) to return electrical and electronic goods free of charge at the end of their useful life to the manufacturer, the place of purchase or to specially set up, public collection points. The details in each case are governed by national law. The symbol on the product, the operating instructions and/or the packaging refers to these regulations. By separating materials in this way, recycling and disposing of old devices, you are making an important contribution towards protecting our environment.



**WEEE guideline: 2012/19/EU**  
**WEEE register number: DE 67896761**

WD Plus GmbH, herewith declares that this product 303090; 303091; 303092 conforms to the principle requirements and other relevant stipulations. The complete Declaration of Conformity can be obtained from: WD Plus GmbH, Wohlenbergstraße 16, 30179 Hanover

## Notes

---

---

---

---

---

---

---

---

---

---

---

