

BRANDSON[®]

- EQUIPMENT -

BEDIENUNGSANLEITUNG USER MANUAL

KONVEKTOR-HEIZUNG CONVEKTOR HEATER

ENG This product is only designed for use inside
well insulated rooms or for occasional use

DE Dieses Produkt ist nur für gut isolierte
Räume oder für den gelegentlichen
Gebrauch geeignet.

Mod.-Nr.: 308924

Table of contents

1. Deutsch	3
2. English	14



<https://model.ganzeinfach.de/308924>

GER: Aktuelle Treiber, Bedienungsanleitungen und sonstige relevante Dokumente zu diesem Produkt finden Sie auf unserer Homepage.

ENG: Current drivers, user manuals and other relevant documents for this product can be found on our homepage.

FRA: Les pilotes actuels, les modes d'emploi et les autres documents relatifs à ce produit sont disponibles sur notre site Internet.

ITA: I driver aggiornati, le istruzioni per l'uso e altri documenti rilevanti per questo prodotto sono disponibili sulla nostra homepage.

ESP: Los controladores actuales, las instrucciones de uso y otros documentos relevantes para este producto se pueden encontrar en nuestra página web.



Nutzungs- und Sicherheitshinweise

- Lesen Sie diese Anleitung vollständig, bevor Sie das Produkt verwenden. Verwenden Sie das Gerät ausschließlich wie in dieser Anleitung beschrieben. Jede andere Verwendung gilt als nicht bestimmungsgemäß und kann zu Schäden oder Verletzungen führen. Nehmen Sie keine Veränderungen am Gerät vor.

Anschließen und Betrieb

- Prüfen Sie vor der Inbetriebnahme, ob die auf dem Typenschild angegebene Spannung mit der Netzspannung übereinstimmt.
- Schließen Sie das Gerät nur an eine ordnungsgemäß installierte, geerdete Steckdose an.
- Ziehen Sie zum Trennen niemals am Kabel, sondern nur am Stecker.

- Trennen Sie das Gerät vor Reinigung oder wenn es nicht verwendet wird vom Stromnetz.
- Lassen Sie das Heizgerät während des Betriebs nicht unbeaufsichtigt.
- Decken Sie das Gerät nicht ab.
- Führen Sie keine Gegenstände in das Heizelement oder in die Lüftungsöffnungen ein.

VORSICHT! Heiße Oberflächen:

- Berühren Sie nur die Bedienelemente.
- Verwenden Sie bei Bedarf hitzebeständige Handschuhe.

ACHTUNG! Brand- und Entzündungsgefahr:

- Halten Sie brennbare Materialien (Möbel, Vorhänge, Papier, Kleidung, Kissen) mindestens 90 cm entfernt.
- Legen Sie keine Gegenstände auf das Gerät.

- Das Gerät darf nicht abgedeckt werden.
- Betreiben Sie das Gerät nicht in explosionsgefährdeten Umgebungen oder in der Nähe von brennbaren Flüssigkeiten, Gasen oder Staub.

WARNUNG! Stromschlag- und Geräteschäden:

- Lüftungsöffnungen freihalten; keine Gegenstände einführen.
- Nicht in der Nähe von Wasser (Badewanne, Dusche, Schwimmbecken) verwenden.
- Gerät niemals in Wasser oder andere Flüssigkeiten tauchen.
- Netzkabel darf nicht mit heißen oder feuchten Oberflächen in Kontakt kommen.

- Bei beschädigtem Netzkabel oder Heizfläche das Gerät nicht betreiben. Nur durch Hersteller oder qualifizierte Fachkraft ersetzen lassen.
- Netzanschlussleitungen dürfen nur von qualifizierten Personen ersetzt werden, um Gefährdungen zu vermeiden.

Kinder- und Personensicherheit:

- Gerät darf von Kindern unter 8 Jahren nur unter Aufsicht genutzt werden.
- Kinder unter 3 Jahren haben keinen Zugang zum Gerät.
- Kinder zwischen 3–8 Jahren dürfen das Gerät nur ein- oder ausschalten unter Aufsicht, nicht anschließen, regulieren, reinigen oder warten.
- Reinigung und Wartung nur durch Erwachsene.
- Das Gerät kann von Personen mit eingeschränkten physischen, sensorischen

oder geistigen Fähigkeiten oder mangelnder Erfahrung nur genutzt werden, wenn sie beaufsichtigt oder in sicherem Gebrauch unterwiesen sind.

Aufstellung und Luftzirkulation

- Nur auf stabile, ebene, hitzebeständige Oberfläche stellen.
- Ausreichend Platz über dem Gerät für Luftzirkulation lassen.
- Nur für Innenräume und privaten Gebrauch verwenden.
- Nicht unmittelbar unter Steckdosen aufstellen.

Überhitzungsschutz und Gerätetransport

- Nur auf stabiler, ebener Unterlage verwenden, nicht auf weichen Materialien wie Kissen oder Decken.
- Gerät nach längerem Betrieb abkühlen lassen, bevor es berührt oder bewegt wird.

- Transport nur am Gehäuse oder Griff; niemals am Netzkabel tragen oder fallen lassen.

Stromkabel und Steckdosen

- Verwenden Sie keine Verlängerungskabel, die nicht den Strombedarf des Gerätes abdecken.
- Netzkabel regelmäßig auf Beschädigungen prüfen.



**DO NOT COVER/
NICHT ABDECKEN**

Vielen Dank, dass Sie sich für ein Produkt von Brandson entschieden haben. Damit Sie lange Freude mit dem erworbenen Gerät haben, lesen Sie sich bitte die nachfolgende Bedienungsanleitung aufmerksam durch. Prüfen Sie vor Inbetriebnahme der gelieferten Ware, ob diese vollständig, fehlerfrei und unbeschädigt ist.

1. Lieferumfang

- Konvektor-Heizer
- Bedienungsanleitung


2. Technische Daten

Spannungsversorgung	220-240 V AC / 50/60 Hz
Leistungsaufnahme	2000 W
Umgebungstemperatur	0°C - 40°C
Eigenschaften	• Thermostat • 3 Heizstufen: 750 W, 1250 W, 2000 W • Überhitzungsschutz

3. Funktion

Mit der Konvektor-Heizung verfügen Sie über eine effiziente und sichere Möglichkeit, Ihre Räume schnell und gleichmäßig zu erwärmen. Die Heizung erwärmt die Luft im Raum durch Konvektion (Wärmeströmung), sodass auch bei niedrigen Temperaturen ein angenehmes Raumklima entsteht.

4. Produkt-Details

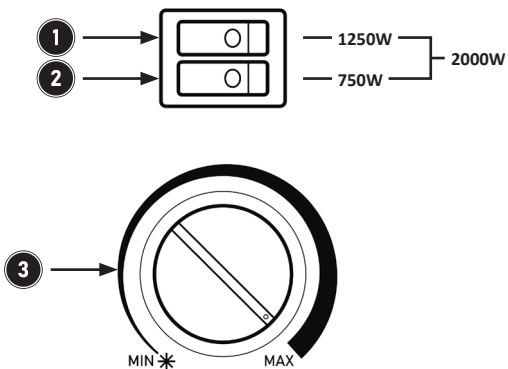

Nr.	Bezeichnung
1	Heizstufe 2 (1250W)
2	Heizstufe 1 (750W)
3	Temperaturregler (Thermostat)

5. Inbetriebnahme und Einstellung

Aufstellort wählen:

Wählen Sie einen geeigneten Ort für das Heizgerät unter Beachtung der Sicherheitshinweise (Abstand zu brennbaren Materialien, freie Lüftungsöffnungen, stabile, ebene Oberfläche).

Befestigen Sie die beiden Kunststofffüße mit den mitgelieferten Schrauben an der Unterseite des Geräts.

Achten Sie darauf, das Heizgerät auf eine ebene Fläche zu stellen.

Anschluss an das Stromnetz:

Stecken Sie den Netzstecker in eine ordnungsgemäß installierte und geerdete Steckdose.

Thermostat einstellen:

Drehen Sie den Temperaturregler zunächst vollständig im Uhrzeigersinn auf die maximale Einstellung.

Heizelemente einschalten:

Schalten Sie die Heizelemente über die Wippschalter an der Seitenwand ein.

- Heizstufe 1: 750W (Wippschalter 1)
- Heizstufe 2: 1250W (Wippschalter 2)
- Heizstufe 1 + 2: 2000W (Wippschalter 1 + Wippschalter 2)

Für maximale Heizleistung (Heizstufe 1+2; 2000W) müssen beide Schalter eingeschaltet sein.

Die Schalter leuchten auf, sobald die Heizelemente aktiv sind.

Temperaturregelung:

Sobald die Umgebungstemperatur ein angenehmes Niveau erreicht hat, drehen Sie das Thermostat langsam gegen den Uhrzeigersinn, bis Sie ein Klicken hören.

Das Thermostat regelt nun automatisch die Raumtemperatur, indem er die Heizelemente ein- und ausschaltet.

6. Reinigung und Wartung

Bevor Sie das Produkt reinigen oder warten, trennen Sie es von der Stromversorgung. Verwenden Sie keine aggressiven oder chemischen Reinigungsmittel. Benutzen Sie ein trockenes, weiches Tuch.

Achten Sie bei der Reinigung darauf, dass Sie die Heizelemente nicht berühren!



7. Sicherheitshinweise und Haftungsausschluss

Versuchen Sie nie das Gerät zu öffnen, um Reparaturen oder Umbauten vorzunehmen. Vermeiden Sie Kontakt zu den Netzspannungen. Schließen Sie das Produkt nicht kurz. Das Gerät ist nicht für den Betrieb im Freien zugelassen, verwenden Sie es nur im Trockenen. Schützen Sie es vor hoher Luftfeuchtigkeit, Wasser und Schnee. Halten Sie das Gerät von hohen Temperaturen fern. Setzen Sie das Gerät keinen plötzlichen Temperaturwechseln oder starken Vibrationen aus, da dies die Elektronikteile beschädigen könnte.

Prüfen Sie vor der Verwendung das Gerät auf Beschädigungen. Das Gerät sollte nicht benutzt werden, wenn es einen Stoß abbekommen hat oder in sonstiger Form beschädigt wurde. Beachten Sie bitte die nationalen Bestimmungen und Beschränkungen. Nutzen Sie das Gerät nicht für andere Zwecke als die, die in der Anleitung beschrieben sind. Dieses Produkt ist kein Spielzeug. Bewahren Sie es außerhalb der Reichweite von Kindern oder geistig beeinträchtigten Personen auf. Jede Reparatur oder Veränderung am Gerät, die nicht vom ursprünglichen Lieferanten durchgeführt wird, führt zum Erlöschen der Gewährleistungs- bzw. Garantieansprüche. Das Gerät darf nur von Personen benutzt werden, die diese Anleitung gelesen und verstanden haben. Die Gerätespezifikationen können sich ändern, ohne dass vorher gesondert darauf hingewiesen wurde.

8. Entsorgungshinweise

Elektrische und elektronische Geräte dürfen nach der europäischen WEEE Richtlinie nicht mit dem Hausmüll entsorgt werden. Deren Bestandteile müssen getrennt der Wiederverwertung oder Entsorgung zugeführt werden, weil giftige und gefährliche Bestandteile bei unsachgemäßer Entsorgung die Umwelt nachhaltig schädigen können.

Sie sind als Verbraucher nach dem Elektro- und Elektronikgerätegesetz (ElektroG) verpflichtet, elektrische und elektronische Geräte am Ende ihrer Lebensdauer an den Hersteller, die Verkaufsstelle oder an dafür eingerichtete, öffentliche Sammelstellen kostenlos zurückgeben. Einzelheiten dazu regelt das jeweilige Landesrecht. Das Symbol auf dem Produkt, der Betriebsanleitung oder/und der Verpackung weist auf diese Bestimmungen hin. Mit dieser Art der Stofftrennung, Verwertung und Entsorgung von Altgeräten leisten Sie einen wichtigen Beitrag zum Schutz unserer Umwelt.

Hinweis zum Datenschutz:

Bitte beachten Sie, dass Sie als Endnutzer selbst dafür verantwortlich sind, personenbezogene Daten vor der Entsorgung eines Altgerätes zu löschen.

 Das Symbol der durchgekreuzten Mülltonne bedeutet, dass die Batterie nicht in den Hausmüll gegeben werden darf.



WEEE Richtlinie: 2012/19/EU
WEEE Register-Nr: DE 67896761

Hiermit erklärt die Firma WD Plus GmbH, dass sich das Gerät 308924 in Übereinstimmung mit den grundlegenden Anforderungen und den übrigen einschlägigen Bestimmungen befindet. Eine vollständige Konformitätserklärung erhalten Sie bei: WD Plus GmbH, Wohlenbergstraße 16, 30179 Hannover. Oder auf folgender Internetadresse:
<https://downloads.ganzeinfach.de/>



Terms of Use and Safety Information

- Please read these instructions thoroughly before using the product.
Use the device only as described in these instructions. Any other use is considered improper and may result in damage or injury.
Do not make any modifications to the device.

Connection and operation

- Before commissioning, check that the voltage stated on the rating plate matches the mains voltage.
- Only connect the appliance to a properly installed, earthed socket.
- Never pull on the cable to disconnect it; always pull on the plug.
- Disconnect the appliance from the mains before cleaning or when it is not in use.

- Do not leave the heater unattended whilst it is in use.
- Do not cover the appliance.
- Do not insert any objects into the heating element or the ventilation openings.

CAUTION! Hot surfaces:

- Please touch only the controls.
- Wear heat-resistant gloves if necessary.

WARNING! Risk of fire and ignition:

- Keep flammable materials (furniture, curtains, paper, clothing, cushions) at least 90 cm away.
- Do not place any objects on top of the appliance.
- The device must not be covered.
- Do not operate the device in potentially explosive atmospheres or near flammable liquids, gases or dust.

WARNING! Risk of electric shock and damage to the appliance:

- Keep ventilation openings clear; do not insert any objects.
- Do not use near water (bath, shower, swimming pool).
- Never immerse the device in water or other liquids.
- The power cable must not come into contact with hot or damp surfaces.
- Do not use the appliance if the power cord or heating element is damaged. Have it replaced only by the manufacturer or a qualified technician.
- Power cables must only be replaced by qualified personnel in order to avoid hazards.

Child and personal safety:

- Children under the age of 8 must only use this appliance under supervision.

- Children under the age of 3 are not permitted to use the device.
- Children aged 3–8 years must only switch the appliance on or off under supervision; they must not plug it in, adjust the settings, clean it or carry out maintenance.
- Cleaning and maintenance must be carried out by adults only.
- The appliance may only be used by persons with reduced physical, sensory or mental capabilities, or lack of experience, if they are supervised or have been instructed in its safe use.

Positioning and air circulation

- Place only on a stable, level, heat-resistant surface.
- Leave sufficient space above the appliance to allow for air circulation.
- For indoor use and private use only.
- Do not place directly beneath sockets.

Overheating protection and transporting the device

- Use only on a stable, flat surface; do not use on soft materials such as cushions or blankets.
- Allow the appliance to cool down after prolonged use before touching or moving it.
- Carry the unit only by the casing or handle; never carry it by the power cord or drop it.

Power cables and sockets

- Do not use extension leads that are not rated for the power requirements of the appliance.
- Check the power cable regularly for damage.



**DO NOT COVER/
NICHT ABDECKEN**

Thank you for choosing a Brandson product. To ensure you enjoy your new appliance for many years to come, please read the following user manual carefully. Before using the product, please check that it is complete, free from defects and undamaged.

1. Scope of delivery

- Convector heater
- User manual


2. Technical Data

Power supply	220-240 V AC / 50/60 Hz
Power consumption	2000 W
Ambient temperature	0°C - 40°C
Features	• Thermostat • 3 heat settings: 750 W, 1250 W, 2000 W • Overheating protection

3. Function

A convector heater offers an efficient and safe way to heat your rooms quickly and evenly. The heater warms the air in the room through convection (the movement of warm air), creating a comfortable indoor climate even at low temperatures.

4. Product details

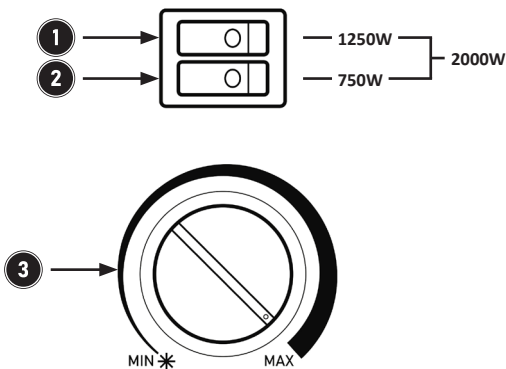

No.	Description
1	Heat setting 2 (1250W)
2	Heat setting 1 (750W)
3	Temperature controller (thermostat)

5. Start-up and adjustment

Select installation location:

Choose a suitable location for the heater, taking care to follow the safety instructions (keep it away from flammable materials, ensure ventilation openings are unobstructed, and place it on a stable, level surface).

Attach the two plastic feet to the underside of the unit using the screws provided. Make sure you place the heater on a level surface.

Connection to the mains:

Plug the power cord into a properly installed and earthed socket.

Adjusting the thermostat:

First, turn the temperature control fully clockwise to the maximum setting.

Switch on the heating elements:

Switch on the heating elements using the toggle switches on the side panel.

- Heat setting 1: 750W (toggle switch 1)
- Heat setting 2: 1250W (toggle switch 2)
- Heat settings 1 + 2: 2000W (toggle switch 1 + toggle switch 2)

For maximum heating power (heating settings 1 and 2; 2000W), both switches must be turned on.

The switches light up as soon as the heating elements are activated.

Temperature control:

Once the room temperature has reached a comfortable level, slowly turn the thermostat anti-clockwise until you hear a click.

The thermostat now automatically regulates the room temperature by switching the heating elements on and off.

6. Cleaning and maintenance

Before cleaning or servicing the product, disconnect it from the mains. Do not use harsh or chemical cleaning agents. Use a dry, soft cloth.

When cleaning, take care not to touch the heating elements!

**7. Safety instructions and disclaimer**

Never attempt to open the device to carry out repairs or modifications. Avoid contact with mains voltage. Do not short-circuit the product. The device is not approved for outdoor use; use it only in dry conditions. Protect it from high humidity, water and snow. Keep the device away from high temperatures. Do not expose the device to sudden temperature changes or strong vibrations, as this could damage the electronic components.

Check the device for damage before use. The device should not be used if it has been knocked or damaged in any other way. Please observe national regulations and restrictions. Do not use the device for any purpose other than those described in the instructions. This product is not a toy. Keep it out of the reach of children

or people with intellectual disabilities. Any repair or modification to the device not carried out by the original supplier will invalidate the warranty or guarantee. The device must only be used by persons who have read and understood these instructions. The device specifications are subject to change without prior notice.

8. Disposal instructions

Under the European WEEE Directive, electrical and electronic equipment must not be disposed of with household waste. Their components must be separated for recycling or disposal, as toxic and hazardous components can cause lasting damage to the environment if disposed of improperly.

As a consumer, you are obliged under the German Electrical and Electronic Equipment Act (ElektroG) to return electrical and electronic equipment at the end of its useful life to the manufacturer, the point of sale or to designated public collection points free of charge. Details are governed by the relevant national legislation. The symbol on the product, the operating instructions and/or the packaging indicates these provisions. By separating, recycling and disposing of waste equipment in this way, you are making an important contribution to protecting our environment.

Privacy notice:

Please note that, as the end user, you are responsible for deleting any personal data before disposing of an old device.



The symbol of the crossed-out wheellie bin means that the battery must not be disposed of with household waste.



WEEE Directive: 2012/19/EU
WEEE Registration No.: DE 67896761

WD Plus GmbH hereby declares that the device 308924 complies with the essential requirements and other relevant provisions. A full declaration of conformity is available from: WD Plus GmbH, Wohlenbergstraße 16, 30179 Hannover. Or at the following web address: <https://downloads.ganzeinfach.de/>

Model identifier(s): WDP-308924					
Item	Symbol	Value	Unit	Item	Unit
Heat output			Type of heat input/room temperature control (select one)		
Nominal heat output	P_{nom}	2,000	kW	single stage heat output and no room temperature control	No
Minimum heat output (indicative)	P_{min}	0,700	kW	two or more manual stages, no room temperature control	No
Maximum continuous heat output	$P_{max,c}$	2,000	kW	with mechanic thermostat room temperature	Yes
Power consumption				with electronic thermostat room temperature	No
In off mode	P_o	0,00	W	electronic room temperature control plus day timer	No
In standby mode	P_{sm}	N/A	W	electronic room temperature control plus week timer	No
In idle mode	P_{idle}	0,00	W	Other control options (multiple selections possible)	
In network standby	P_{nsm}	N/A	W	room temperature control, with presence detection	No
Standby mode with display of information or status			No	room temperature control, with open window detection	No
Seasonal space heating energy efficiency in active mode	$\eta_{s,on}$	85	%	distance control option	No
				adaptive start control	No
				working time limitation	No
				black bulb sensor	No
				self-learning functionality	No
				control accuracy	No
Contact details				WD Plus GmbH, Wohlenbergstraße 16, 30179 Hannover, Germany	

CONTACT US



feedback@ganzeinfach.de



(DE) 0800 72 444 05
+49 511 / 13221 710
(UK) +49 511 / 13221 720
(FR) +49 511 / 13221 730
(IT) +49 511 / 13221 740
(ES) +49 511 / 13221 750

MO-FR 9:30am - 18pm CET



brandson-equipment.de